


Display

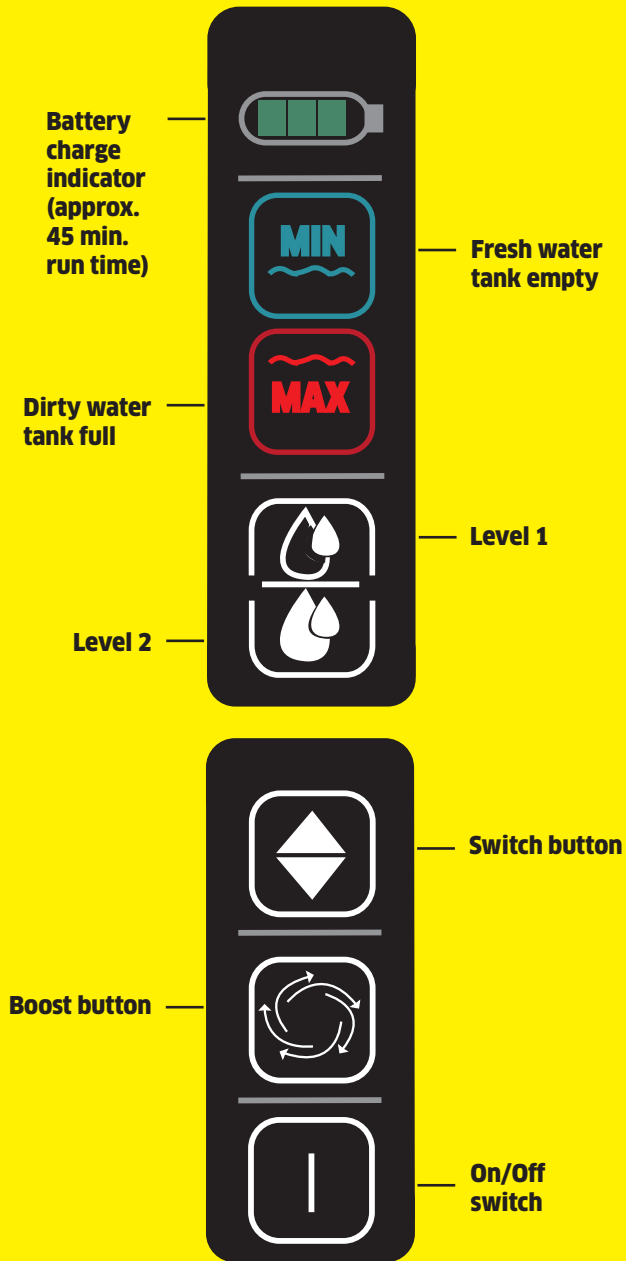

Scan code for videos




www.kaercher.com/fc7

KÄRCHER

ROBOT WORLD

FC 7 CORDLESS QUICKSTART GUIDE

First assembly

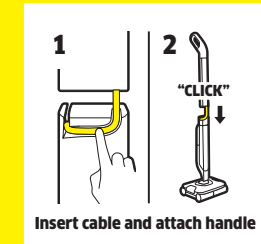

First steps before use

- Charge (max. 4h)**: Plug the charging cable into the robot and a power outlet.
- Fill fresh water tank**: Fill the tank with clean water.
- Fill in detergent (1/2 cap)**: Add detergent to the tank.
- Insert**: Insert the cleaning pad into the tank.
- Put device upon the tank**: Place the robot on the tank, ensuring it clicks.
- For usage of the very first time pre-moisten rollers with water**: Moisten the rollers.
- Press On/Off button**: Press the power button to turn the robot on.
- Press boost button until rollers are wet**: Press the boost button to activate the rollers.








Switch cleaning mode






Activate boost function



Refill fresh water tank





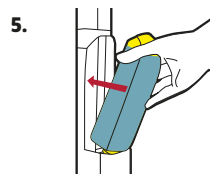
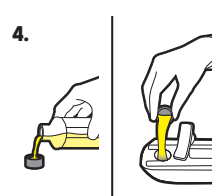
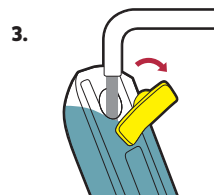
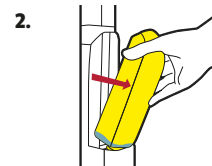
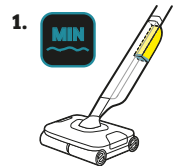


Empty dirty water tank

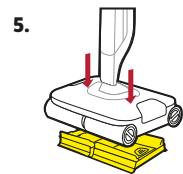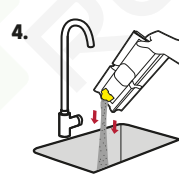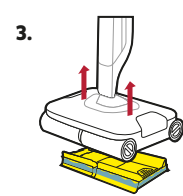

Cleaning and storing

Step 1: Clean the device

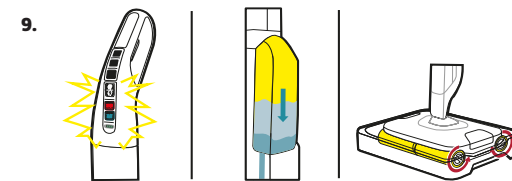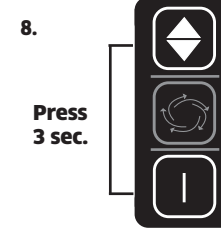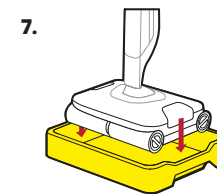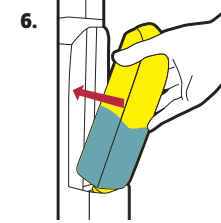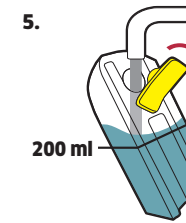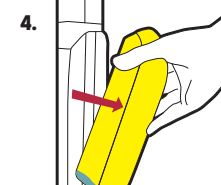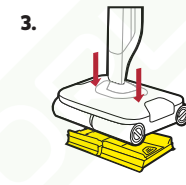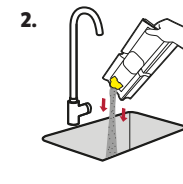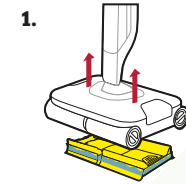

Please wait about 2 min.

Step 2: Store the device

